 

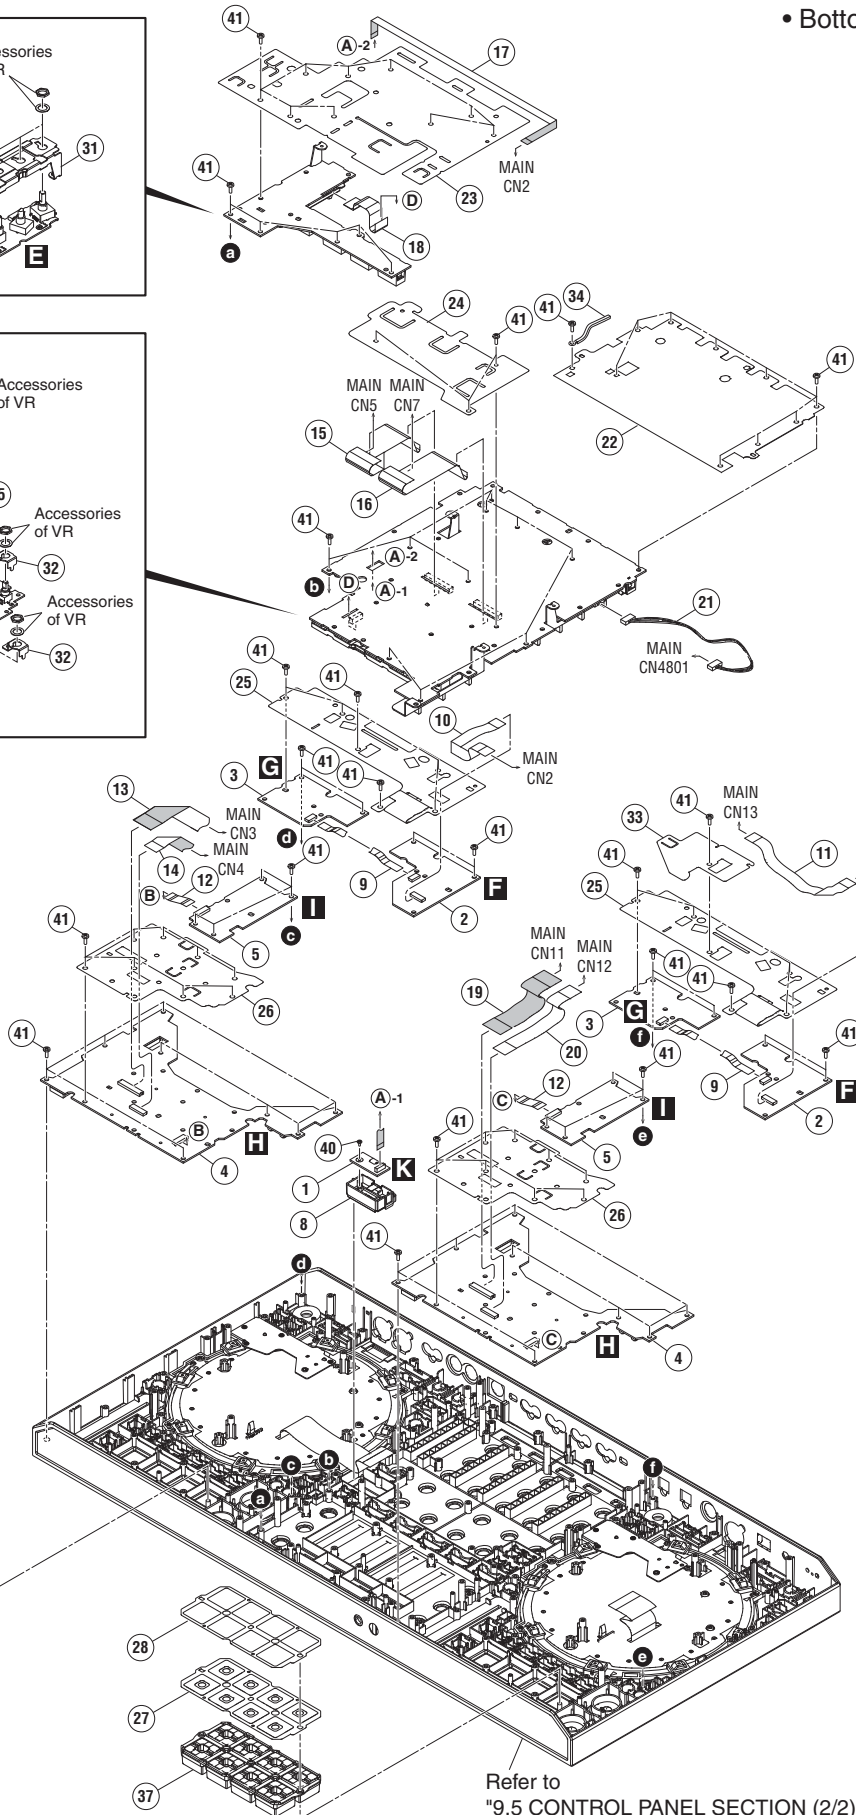
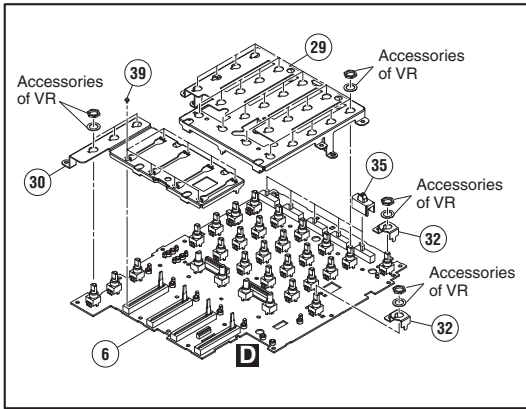


# 9.4 CONTROL PANEL SECTION (1/2)

• Bottom view

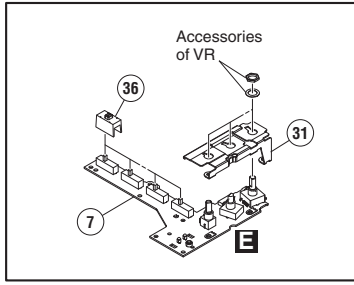

## CONTROL PANEL SECTION (1/2) SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	OLED Assy	DWX4106	
2	LOOP Assy	DWX4108	A
3	BRWS Assy	DWX4109	
4	PADB Assy	DWX4110	
5	PLAY Assy	DWX4111	
6	MIXER Assy	DWX4112	
7	BFXB Assy	DWX4117	
8	OLED Assy (Service)	DEA1084	
9	FFC	DDD1831	
10	FFC	DDD1832	
11	FFC	DDD1833	B
12	FFC	DDD1834	
13	FFC	DDD1835	
14	FFC	DDD1836	
15	FFC	DDD1839	
16	FFC	DDD1840	
17	FFC	DDD1841	
18	FFC	DDD1842	
19	FFC	DDD1844	
20	FFC	DDD1845	C
21	Shielded Conn-Cable	DDA1082	
22	I-Shield Sheet	DEC3765	
23	Sheet	DEC3770	
24	Sheet	DEC3771	
25	Sheet	DEC3772	
26	Sheet	DEC3773	
27	Sheet	DEC3774	
28	Spacer	DEC3775	
29	Stay	DNH3343	D
30	Stay	DNH3346	
31	Stay	DNH3347	
32	Stay	DNF2039	
⚠ 33	Sheet	DEC3780	
34	Cord Clamper (Steel)	RNH-184	
35	SW Cap	DAC2753	
36	Slide SW Cap (W)	DAC2401	
37	Button	DEB2059	
38	•••••		E
39	Screw	PMH20P040FTC	
40	Screw	BPZ20P040FTB	
41	Screw	BPZ30P080FNI	