

9.2 BOTTOM SECTION

A

 


B

C

D

E

F

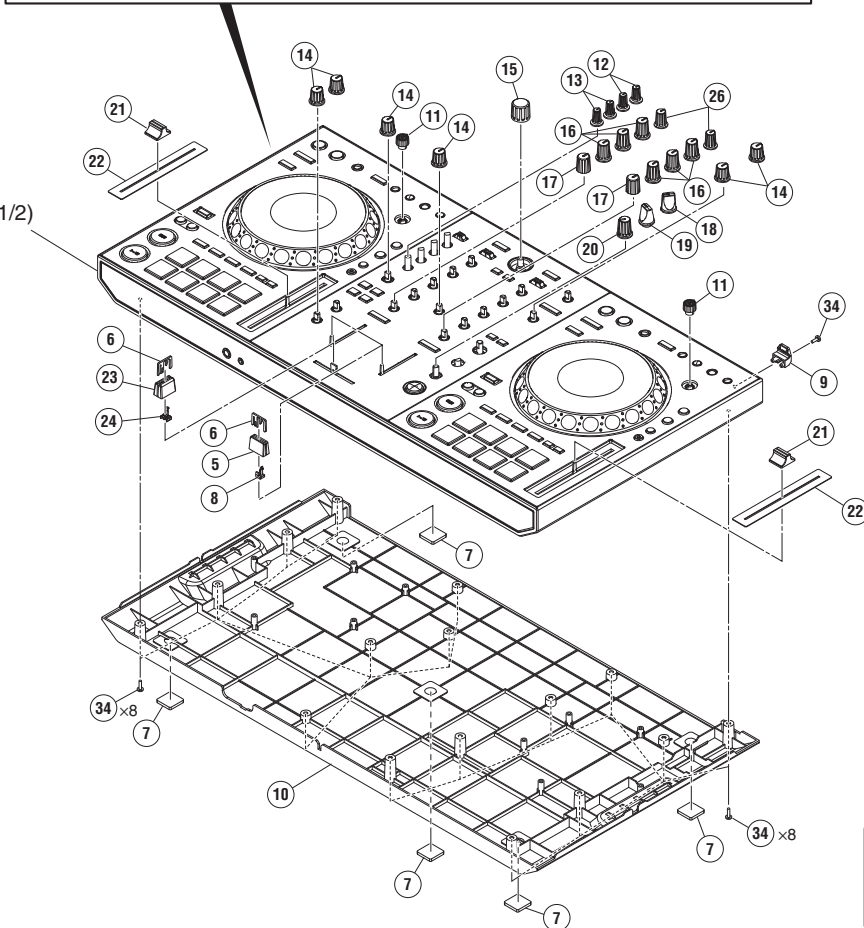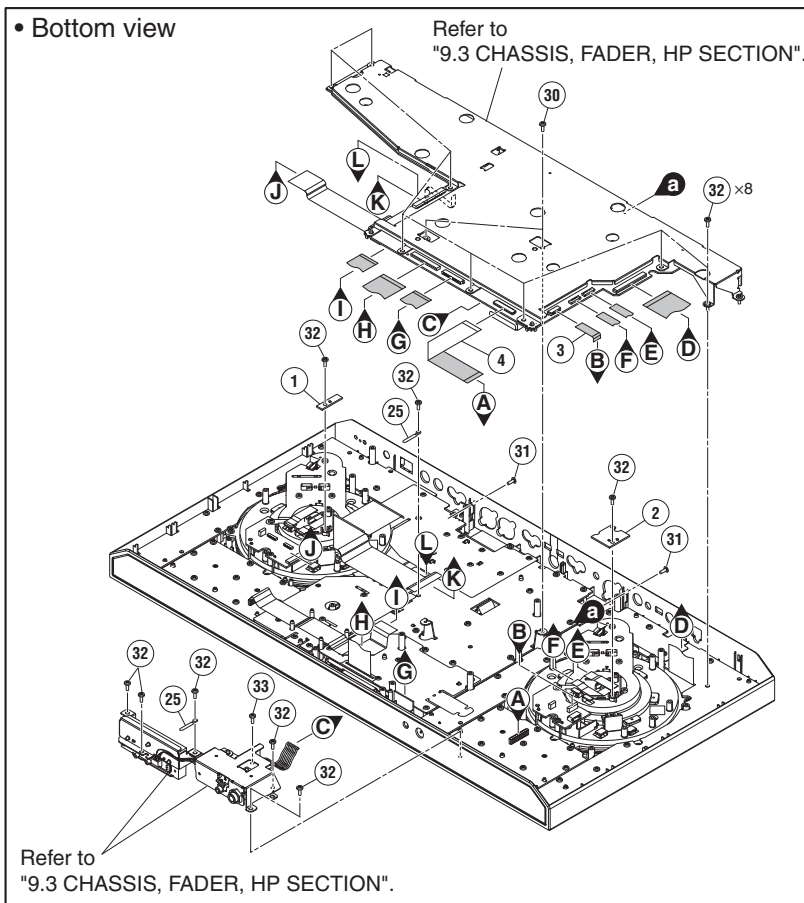

BOTTOM SECTION PARTS LIST

<u>Mark No.</u>	<u>Description</u>	<u>Part No.</u>	
1	JOGH Assy	DWX4223	
2	JGLH Assy	DWX4224	A
3	FFC	DDD1888	
4	FFC	DDD1889	
5	Slider Knob 1	DAC2684	
6	Slider Knob 2	DAC2685	
7	Leg	DEC3816	
8	Stopper/SLD	DNK6009	
9	Hook	DNK6755	
⚠ 10	Chassis	DNK6814	
11	Knob/CFC	DAA1326	B
12	Knob	DAA1395	
13	Knob	DAA1396	
14	Knob	DAA1360	
15	Dial Knob	DAA1246	
16	Knob	DAA1361	
17	Knob	DAA1366	
18	Select Knob	DAA1205	
19	FX Sel Knob	DAA1213	
20	Knob	DAA1368	C
21	Knob/SLD	DNK5981	
22	Slide Sheet 1C	DAH2404	
23	Knob	DAC3238	
24	Stopper	DNK6440	
25	Cord Clamper (Steel)	RNH-184	
26	Knob	DAA1441	
27	•••••		
28	•••••		
29	•••••		
30	Screw	BBZ30P060FTC	D
31	Screw	BBZ30P080FTB	
32	Screw	BPZ30P080FNI	
33	Screw	BPZ30P100FTB	
34	Screw	BPZ30P120FTB	