



# User Guide

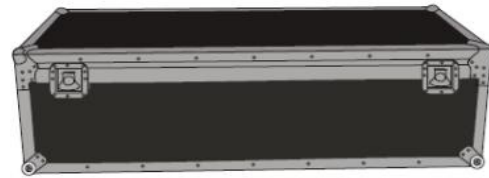


Thank you for choosing FAST FOLD SCREEN, before using, please read the instruction carefully

## PARTS OF YOUR SCREEN

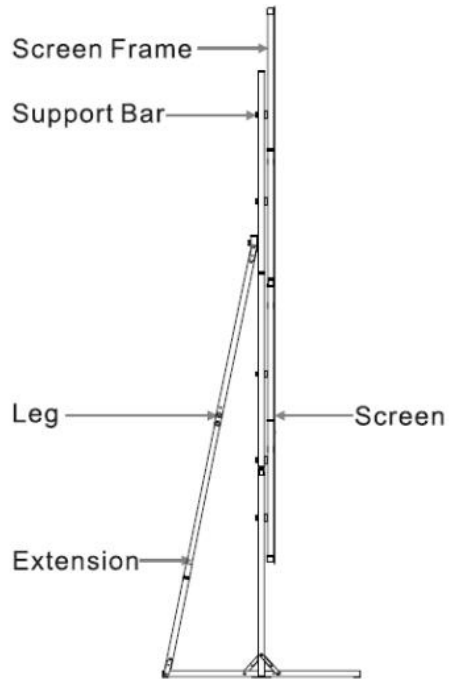

Transportable Case


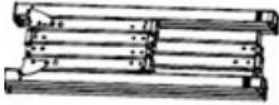
Your Screen should include:

Screen Frame (1pc) 	All models
Legs (2pcs) 	All models except wall mount
Tightening Knobs 	All models



<p>Front surface</p> 	<p>Front projection models</p>
<p>Rear surface</p> 	<p>Rear projection models</p>
<p>Transportation Case</p> 	<p>All models except wall mount</p>

## ERECTING THE SCREEN



The screen should be installed at the best possible viewing position for the audience. Front projection (Picture 1) and Rear projection (Picture 2). Install according to material chosen and place the projector at the optimal distance to fill screen width.

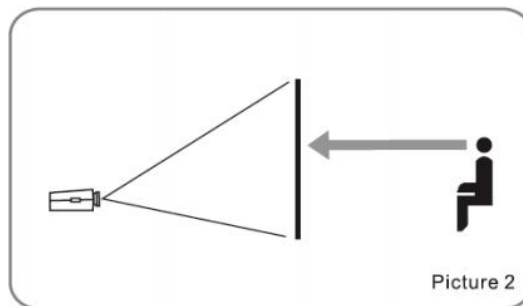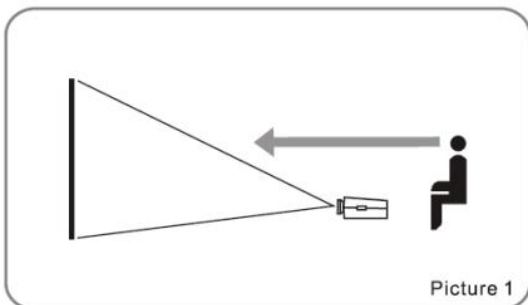




1. Unpack and extend frame on a flat surface (Picture 3&4).

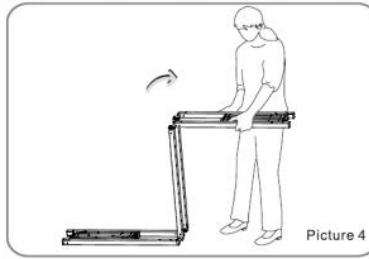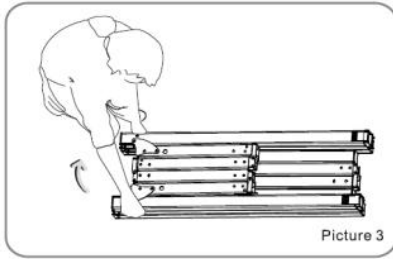


2. To secure frame, "click" hinges into place (Picture.5&6).

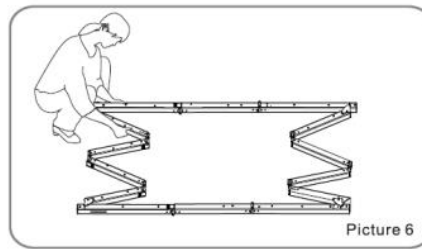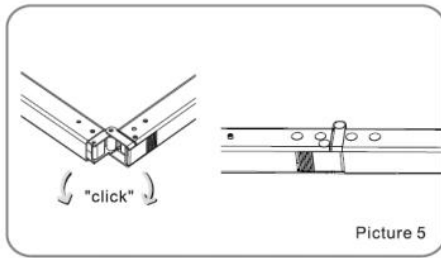



3. Make sure 4 corners are 90 degrees then secure with support beams (Picture.7-9).

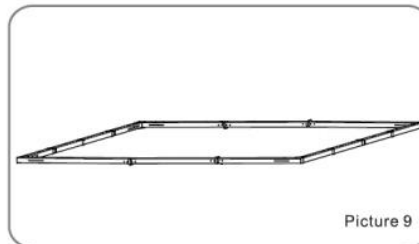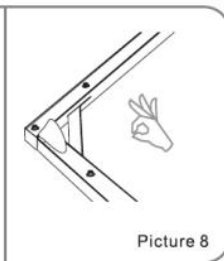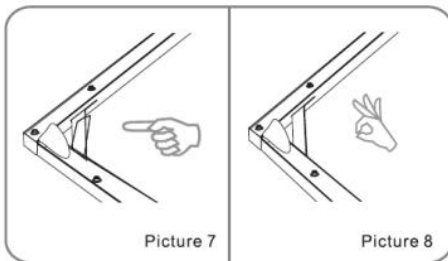


4. Unfold screen fabric and lay over frame (Picture.10-11).

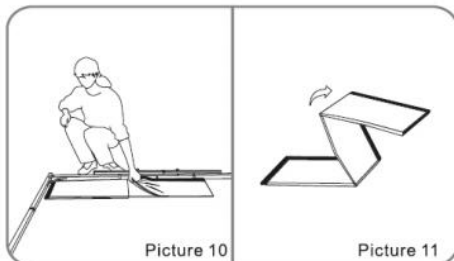


5. Snap screen buttons to frame. Start at top and finish at bottom (Picture. 12-15).


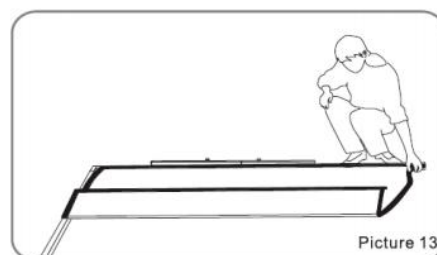
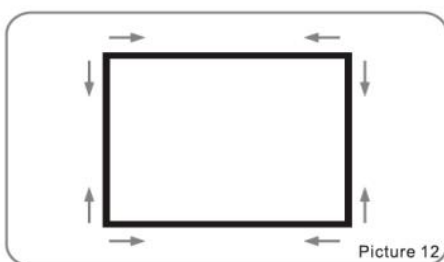


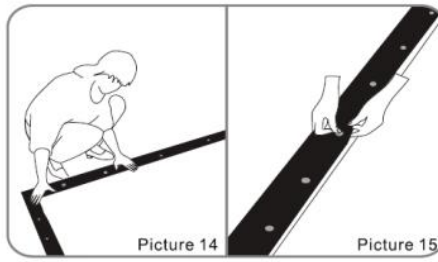



6. Unpack and extend legs (Picture.16).

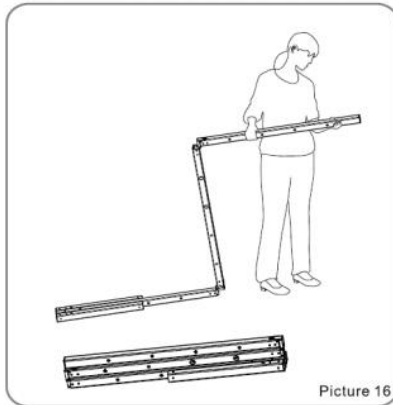


7. Set frame to desired height then extend legs accordingly and fasten with knob (Picture. 17-19).

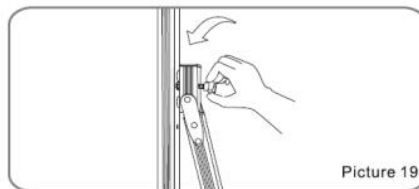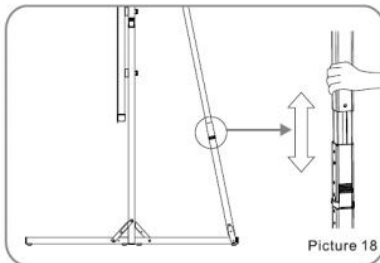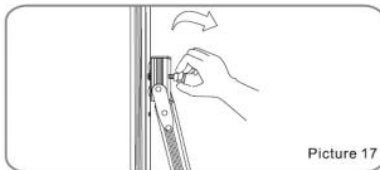

8. It's best to attach legs to frame on flat ground. When raising the screen (Picture. 20&21).

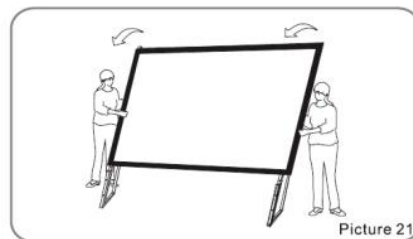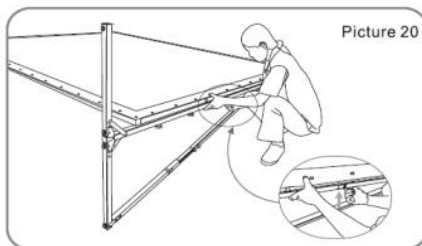


9. Pull down front feet for stability (Picture 22&23).

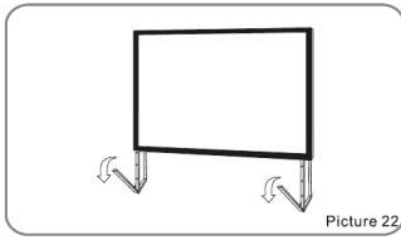


## DISASSEMBLING THE SCREEN


1. Lay down the screen on flat ground (Picture.24).

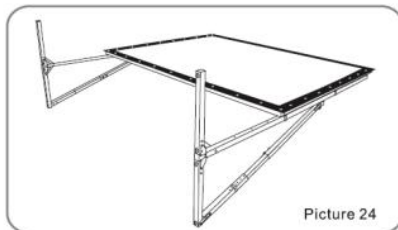


2. Carefully take off screen from the frame by releasing the buttons then fold (Picture. 25).

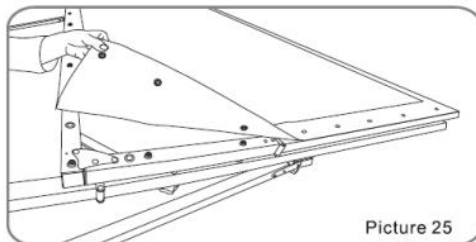

3. Screw off the knobs and fold the legs with releasing the locking system (Picture. 26&27).

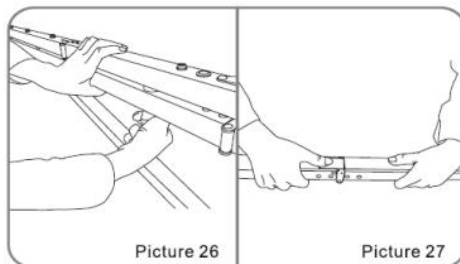

4. Release the support beam on frame corners (Picture.28) as well as the locking buttons on the frame, then fold the frame from both sides (Picture.29).

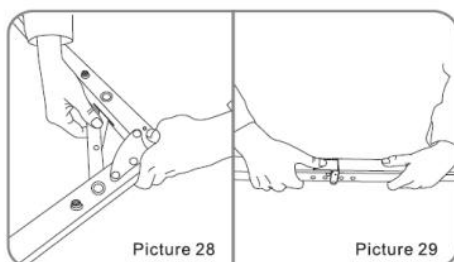




5. Store firstly frame and legs on the bottom layer of the freight case, fabric on top layer.

## SAFETY AND OTHER WARNINGS

Please read the following as any damage to the screen surface will affect the quality of the picture:

1. Avoid contact or touching the screen surface as it may cause scratches or tears.
2. Do not write or draw on the surface.
3. Clean the screen with a soft cloth and lukewarm water. Do not use any detergent or cleaning products.
4. To avoid injury, two people are necessary for both assembly and storage.
5. Please use in a location shielded from the elements, especially wind. A strong wind may cause the screen to fall. All pieces of the frame and stand must be used together. The screen can be used separately.
6. To prevent unnecessary damage, the operating and maintenance of the screen should be done by adults.
7. Please fold up screen and return all parts into the case after every use.
8. Product specifications are subject to change without notice

	Ignoring the safety warnings may lead to injuries and/or damage to the product.
	Always store back into the transportation case after use.
	When outside avoid using the screen in bad weather conditions including wind and rain.