

DRUMS

Bass Drum (Kick)

No.	Instrument	Loop	Exc No.	Hold	SPD-11
b01	Dry Kick				x
b02	Dry Medium Kick				
b03	Dry Hard Kick				
b04	Meat Kick				
b05	Pillow Kick			x	
b06	Jazz Kick 1				
b07	Jazz Kick 2				
b08	Maple Kick				
b09	Real Kick			x	
b10	Vintage Kick 1				
b11	Vintage Kick 2				
b12	26" Deep Kick				
b13	Medium Kick				
b14	Oyster Kick				
b15	Open Kick				
b16	Big Low Kick				
b17	Wood Beater Kick				
b18	Deep Kick			x	
b19	Room Kick 1			x	
b20	Room Kick 2			x	
b21	Reverb Kick			x	
b22	Deep Reverb Kick			x	
b23	Mondo Kick			x	
b24	Mondo Deep Kick			x	
b25	Mondo Reverb Kick			x	
b26	Solid Kick			x	
b27	Reverb Solid Kick			x	
b28	House Kick			x	
b29	Dance Kick			x	
b30	Deep Dance Kick				
b31	Rap Kick 1			x	
b32	Rap Kick 2				
b33	Plastic Kick 1				
b34	Plastic Kick 2				
b35	Gabba Kick				
b36	Jungle Kick				

No.	Instrument	Loop	Exc No.	Hold	SPD-11
b37	Electronic Kick 1				
b38	Electronic Kick 2				x
b39	TR-808 Kick 1				x
b40	TR-808 Kick 2				
b41	TR-808 Kick 3				
b42	808 Electronic Kick				x
b43	808 Boom Kick 1				
b44	808 Boom Kick 2				
b45	TR-909 Kick 1				x
b46	TR-909 Kick 2				
b47	TR-909 Kick 3				
b48	909 Hard Kick				x
b49	TR-606 Distortion Kick				
b50	CR-78 Kick				

Snare Drum

No.	Instrument	Loop	Exc No.	Hold	SPD-11
S01	Piccolo Snare Soft				
S02	Piccolo Snare Hard				
S03	Piccolo Snare Rim Shot				
S04	Beech Snare Soft				
S05	Beech Snare Hard				
S06	Beech Snare Rim Shot				
S07	Acoustic Snare Soft				
S08	Acoustic Snare Hard				
S09	Acoustic Snare Rim Shot				
S10	Steel Snare Soft				
S11	Steel Snare Hard				
S12	Steel Snare Rim Shot				
S13	Loose Snare Soft				
S14	Loose Snare Hard				x
S15	Loose Snare Rim Shot				
S16	Medium Snare 1 Soft				
S17	Medium Snare 1 Hard				
S18	Medium Snare 1 Rim Shot				
S19	Medium Snare 2 Soft				
S20	Medium Snare 2 Hard				
S21	Medium Snare 2 Rim Shot				
S22	Concert Snare Soft		Exc 1		
S23	Concert Snare Hard		Exc 1		

No.	Instrument	Loop	Exc No.	Hold	SPD-11
S24	Concert Snare Rim Shot			Exc 1	
S25	Concert Snare Roll		Exc 1		
S26	Concert Snare Buzz		Exc 1		
S27	Roll Snare				x
S28	Brass Snare Soft				
S29	Brass Snare Hard				
S30	Ring Snare Soft				
S31	Ring Snare Hard				x
S32	High Piccolo Snare				
S33	Medium Fat Snare				
S34	TD-7 Acoustic Snare				x
S35	Real Snare				x
S36	L.A. Snare				x
S37	L.A. Fat Snare				x
S38	Fat Snare				x
S39	Brush Roll Snare 1		Exc 2		x
S40	Brush Roll Snare 2		Exc 2		x
S41	Brush Swish Snare		Exc 2		x
S42	Brush Slap Snare 1				x
S43	Brush Slap Snare 2				x
S44	Brush Slap Snare 3				x
S45	Brush Slap Snare 4				
S46	Rock Snare				x
S47	Rocker Snare				x
S48	Rockin' Snare				x
S49	Rock Light Snare				x
S50	Rock Rim Shot Snare			x	
S51	Rock Splatter Snare				x
S52	Light Snare				x
S53	Big Shot Snare				x
S54	Hyper Snare				x
S55	Splatter Snare				x
S56	Super Light Snare				x
S57	Super Whack Snare				x
S58	Cracker Snare				x
S59	Cruddy Snare				x
S60	Dopin' Snare				x
S61	House Snare				x
S62	House Dopin' Snare				x
S63	Reggae Snare 1				x

No.	Instrument	Loop	Exc No.	Hold	SPD-11
S64	Reggae Snare 2				x
S65	Swing Snare				x
S66	90's Snare				x
S67	Digital Snare				x
S68	FX Snare				x
S69	Rage Snare				
S70	Jungle Tiny Snare				
S71	Jungle Rim Snare				
S72	Electronic Snare 1				
S73	Electronic Snare 2				x
S74	TR-808 Snare 1				x
S75	TR-808 Snare 2				
S76	TR-909 Snare				x
S77	TR-707 Snare				
S78	TR-606 Snare				
S79	CR-78 Snare				
S80	Ambient Cross Stick				x
S81	Hall Cross Stick				x
S82	Analog Cross Stick				
S83	Ragga Cross Stick				
S84	TR-808 Cross Stick				x
S85	TR-909 Cross Stick				
S86	CR-78 Cross Stick				

Tom-Tom

No.	Instrument	Loop	Exc No.	Hold	SPD-11
t01	Big Tom 1 Soft				
t02	Big Tom 1 Hard				
t03	Big Tom 2 Soft				
t04	Big Tom 2 Hard				
t05	Studio Tom 1 Soft				
t06	Studio Tom 1 Hard				
t07	Studio Tom 2 Soft				
t08	Studio Tom 2 Hard				
t09	Jazz Tom 1 Soft				
t10	Jazz Tom 1 Hard				
t11	Jazz Tom 2 Soft				
t12	Jazz Tom 2 Hard				
t13	Vintage Tom 1 Soft				
t14	Vintage Tom 1 Hard				

No.	Instrument	Loop	Exc No.	Hold	SPD-11
t15	Vintage Tom 2 Soft				
t16	Vintage Tom 2 Hard				
t17	Double Head Tom 1			x	
t18	Double Head Tom 2			x	
t19	Fusion Tom 1				
t20	Fusion Tom 2				
t21	Real Tom 1			x	
t22	Real Tom 2			x	
t23	Birch Tom 1				
t24	Birch Tom 2				
t25	Bowl Tom 1				
t26	Bowl Tom 2				
t27	Room Tom 1				
t28	Room Tom 2				
t29	Acoustic Tom 1			x	
t30	Acoustic Tom 2			x	
t31	Rock Tom 1			x	
t32	Rock Tom 2			x	
t33	Brush Slap Tom 1			x	
t34	Brush Slap Tom 2			x	
t35	Electronic Tom				
t36	2-Tone Electronic Tom				
t37	Bright Electronic Tom				
t38	TR-808 Tom			x	
t39	TR-909 Tom				
t40	909 Whack Tom				

Hi-Hat Cymbal

No.	Instrument	Loop	Exc No.	Hold	SPD-11
h01	Pop Closed Hi-Hat Inner		Exc 31		x
h02	Pop Closed Hi-Hat Outer		Exc 31		x
h03	Pop Open Hi-Hat Inner	Exc 31		x	
h04	Pop Open Hi-Hat Outer	Exc 31		x	
h05	Pop Pedal Hi-Hat		Exc 31		x
h06	Real Closed Hi-Hat Inner		Exc 31		x
h07	Real Closed Hi-Hat Outer		Exc 31		x
h08	Real Open Hi-Hat Inner		Exc 31		x
h09	Real Open Hi-Hat Outer		Exc 31		x
h10	Real Pedal Hi-Hat		Exc 31		x
h11	Brush Closed Hi-Hat		Exc 31		x

No.	Instrument	Loop	Exc No.	Hold	SPD-11
h12	Brush Open Hi-Hat		Exc 31		x
h13	Pure Closed Hi-Hat Inner		Exc 31		
h14	Pure Closed Hi-Hat Outer		Exc 31		
h15	Pure Half Open Hi-Hat	Exc 31			
h16	Pure Open Hi-Hat		Exc 31		
h17	Heavy Closed Hi-Hat		Exc 31		
h18	Heavy Open Hi-Hat		Exc 31		
h19	Medium Closed Hi-Hat	Exc 31			
h20	Medium Open Hi-Hat		Exc 31		
h21	Tambourine Closed Hi-Hat		Exc 31		
h22	Tambourine Open Hi-Hat		Exc 31		
h23	Wheel Closed Hi-Hat		Exc 31		
h24	Wheel Open Hi-Hat		Exc 31		
h25	Wheel Pedal Hi-Hat		Exc 31		
h26	TR-808 Closed Hi-Hat Inner		Exc 31		x
h27	TR-808 Closed Hi-Hat Outer		Exc 31		x
h28	TR-808 Open Hi-Hat Inner		Exc 31		x
h29	TR-808 Open Hi-Hat Outer		Exc 31		x
h30	TR-909 Closed Hi-Hat	Exc 31			
h31	TR-909 Open Hi-Hat		Exc 31		
h32	CR-78 Closed Hi-Hat		Exc 31		x
h33	CR-78 Open Hi-Hat		Exc 31		x

Hi-Hat Cymbal for pedal control

No.	Instrument	Loop	Exc No.	Hold	SPD-11
H01	Pop Hi-Hat Inner		Exc 31		x
H02	Pop Hi-Hat Outer		Exc 31		x
H03	Real Hi-Hat Inner		Exc 31		x
H04	Real Hi-Hat Outer		Exc 31		x
H05	Brush Hi-Hat		Exc 31		x
H06	Pure Hi-Hat Inner		Exc 31		
H07	Pure Hi-Hat Outer		Exc 31		
H08	Heavy Hi-Hat		Exc 31		
H09	Medium Hi-Hat		Exc 31		
H10	Wheel Hi-Hat		Exc 31		
H11	TR-808 Hi-Hat Inner		Exc 31		x
H12	TR-808 Hi-Hat Outer		Exc 31		x
H13	TR-909 Hi-Hat		Exc 31		
H14	CR-78 Hi-Hat		Exc 31		x
H15	Chenchen Hi-Hat		Exc 31		

No.	Instrument	Loop	Exc No.	Hold	SPD-11
H16	Shekere Hi-Hat		Exc 31		
H17	Hand Cymbal Hi-Hat		Exc 31		

Crash/Ride Cymbal

No.	Instrument	Loop	Exc No.	Hold	SPD-11
C01	Crash Cymbal 1				x
C02	Crash Cymbal 2				x
C03	Quick Crash Cymbal				
C04	Crash Cymbal Soft				
C05	Chinese Cymbal 1				
C06	Chinese Cymbal 2			x	
C07	Chinese Cymbal 3			x	
C08	Sizzle Chinese Cymbal				
C09	Splash Cymbal 1				
C10	Splash Cymbal 2				
C11	Pgy Crash Cymbal 1				
C12	Pgy Crash Cymbal 2				
C13	Pgy Chinese Cymbal				
C14	Pgy Splash Cymbal				
C15	Ride Cymbal 1			x	
C16	Ride Bell Cymbal 1			x	
C17	Ride Cymbal 2				
C18	Ride Bell Cymbal 2				
C19	Ride Cymbal 3				
C20	Ride Bell Cymbal 3				
C21	Sizzle Ride Cymbal 1				
C22	Sizzle Ride Bell Cymbal 1				
C23	Sizzle Ride Cymbal 2				
C24	Sizzle Ride Bell Cymbal 2				
C25	Sizzle Ride Cymbal 3				
C26	Sizzle Ride Bell Cymbal 3				
C27	Pgy Ride Cymbal 1				
C28	Pgy Ride Cymbal 2				
C29	Brush Crash Cymbal				
C30	Brush Sizzle Crash Cymbal				
C31	Brush Ride Cymbal			x	
C32	Brush Sizzle Ride Cymbal				
C33	Hand Cymbals			x	
C34	Mallet Cymbal				
C35	TR-808 Cymbal			x	

No.	Instrument	Loop	Exc No.	Hold	SPD-11
C36	TR-606 Cymbal				

PERCUSSION

Latin Percussion (Cuban, Brazilian)

No.	Instrument	Loop	Exc No.	Hold	SPD-11
L01	R-8 Bongo High				
L02	R-8 Bongo Low				
L03	Bongo High				x
L04	Bongo Low 1				x
L05	Bongo Low 2				x
L06	R-8 Conga High Mute				
L07	R-8 Conga High Open				
L08	R-8 Conga Low Open				
L09	Conga High Mute				x
L10	Conga High Slap				x
L11	Conga High Open				x
L12	Conga Low Open 1				x
L13	Conga Low Open 2				x
L14	Cowbell 1				x
L15	Cowbell 2				x
L16	Cowbell 3				
L17	Cowbell 4				
L18	Cowbell 5				
L19	Claves 1				x
L20	Claves 2				x
L21	Guiro Short		Exc 3		x
L22	Guiro Long		Exc 3		x
L23	Maracas				x
L24	Shaker 1				x
L25	Shaker 2				
L26	Shaker 3				
L27	Tambourine 1				x
L28	Tambourine 2				
L29	Timbale High				
L30	Timbale High Rim Shot			x	
L31	Timbale Low				x
L32	Timbale Paila				x
L33	Vibra Slap				x
L34	Agogo 1 High				
L35	Agogo 1 Low				

No.	Instrument	Loop	Exc No.	Hold	SPD-11
L36	Agogo 2 High				
L37	Agogo 2 Low				
L38	Agogo 3			x	
L39	Cabasa			x	
L40	TD-10 Cuica Mute 1		Exc 4		
L41	TD-10 Cuica Mute 2		Exc 4		
L42	TD-10 Cuica Open		Exc 4		
L43	Cuica Mute 1		Exc 5	x	
L44	Cuica Mute 2		Exc 5	x	
L45	Cuica Open		Exc 5	x	
L46	Pandeiro 1 Mute		Exc 6		
L47	Pandeiro 1 Slap		Exc 6		
L48	Pandeiro 1 Open		Exc 6		
L49	Pandeiro 2 Mute		Exc 7	x	
L50	Pandeiro 2 Slap		Exc 7	x	
L51	Pandeiro 2 Open		Exc 7	x	
L52	Pandeiro 3			x	
L53	R-8 Surdo Rim			x	
L54	R-8 Surdo Mute		Exc 8	x	
L55	R-8 Surdo Open		Exc 8	x	
L56	Surdo Mute		Exc 9		
L57	Surdo Open		Exc 9		
L58	Tamborim 1 Mute				
L59	Tamborim 1 Slap				
L60	Tamborim 1 Open			x	
L61	Tamborim 2 Open			x	
L62	TD-10 Samba Whistle Short		Exc 10		
L63	TD-10 Samba Whistle Long		Exc 10		
L64	Samba Whistle Short		Exc 11	x	
L65	Samba Whistle Long		Exc 11	x	
L66	Caxixi				
L67	Berimbau Mute		Exc 12		
L68	Berimbau Open		Exc 12		
L69	Berimbau Up		Exc 12		
L70	Berimbau Down		Exc 12		
L71	Caixa Mute				
L72	Caixa Open Soft				
L73	Caixa Open Hard				
L74	Caixa Roll				
L75	Rain Stick				

No.	Instrument	Loop	Exc No.	Hold	SPD-11
L76	Samba Bateria				
L77	Samba Loop	x	Exc 30	x	
L78	Shaker Loop	x	Exc 30	x	

Indian Percussion

No.	Instrument	Loop	Exc No.	Hold	SPD-11
i01	Sarna Bell				
i02	Baya 1 Slide		Exc 13		
i03	Baya 1 Gin		Exc 13		
i04	Baya 1 Ka		Exc 13		
i05	Baya 1 Ge		Exc 13		
i06	Baya 2 Ge		Exc 13		x
i07	Tabla 1 Na		Exc 14		
i08	Tabla 1 Tin		Exc 14		
i09	Tabla 1 Tun		Exc 14		
i10	Tabla 1 Ti		Exc 14		
i11	Tabla 2 Te		Exc 14		x
i12	Tabla 2 Na 1		Exc 14		x
i13	Tabla 2 Na 2		Exc 14		x
i14	Tabla 2 Tun		Exc 14		x
i15	Pot Drum 1 Low		Exc 3		
i16	Pot Drum 1 High		Exc 32		
i17	Pot Drum 1 Accent				
i18	Pot Drum 2 Mute				
i19	Pot Drum 2 Long		Exc 33		
i20	Pot Drum 2 Short		Exc 33		
i21	Dholak Ga				
i22	Dholak Ta		Exc 34		
i23	Dholak Tun		Exc 34		
i24	Dholak Na		Exc 34		
i25	Madal Da				
i26	Madal Din		Exc 35		
i27	Madal Ta		Exc 35		
i28	Khole				
i29	Dhol 1		Exc 15		
i30	Dhol 2		Exc 15		
i31	Dhol 3		Exc 16		
i32	Dhol 4		Exc 16		
i33	Tabla Baya Loop	x	Exc 30		x

African/Middle Eastern/Australian/Other Percussion

No.	Instrument	Loop	Exc No.	Hold	SPD-11
< Africa >					
F01	Shekere			x	
F02	Djembe 1 Center				
F03	Djembe 1 Rim				
F04	Djembe 2			x	
F05	Djembe 3			x	
F06	Djembe 4			x	
F07	Talking Drum 1 Down	Exc 17			
F08	Talking Drum 1 Up		Exc 17		
F09	Talking Drum 2			x	
F10	Afro Drum Open 1				
F11	Afro Drum Open 2				
F12	Afro Drum Flam				
F13	Afro Drum Rattle				
F14	Metal Castanets				
< Middle East >					
F15	Bell Tree			x	
F16	Sagat Closed		Exc 18		
F17	Sagat Open		Exc 18		
F18	Darbuka 1 Dom				
F19	Darbuka 1 Tak				
F20	Darbuka 2			x	
F21	Doira Dun				
F22	Doira Tik				
F23	Doholla Dom				
F24	Doholla Sak				
F25	Doholla Tak				
F26	Doholla Roll		Exc 19		
F27	Doholla Stop		Exc 19		
F28	Rek Dom				
F29	Rek Tek				
F30	Rek Open				
F31	Rek Trill				
F32	Bendir				
F33	Dawul				
< Australia >					
F34	Clapstick				
F35	Boomerang				

No.	Instrument	Loop	Exc No.	Hold	SPD-11
-----	------------	------	---------	------	--------

< Other >					
F36	Bloom Bell				
< Africa >					
F37	Afro Loop	x	Exc 30	x	

Japanese/Korean/Chinese/Southeast Asian Percussion

No.	Instrument	Loop	Exc No.	Hold	SPD-11
-----	------------	------	---------	------	--------

< Japan >					
J01	Biwa				
J02	Atarigane				
J03	Hyoshigi				
J04	Ohkawa				
J05	Tsuzumi 1 High				
J06	Tsuzumi 1 Low				
J07	Tsuzumi 2			x	
J08	Shime Taiko 1				
J09	Shime Taiko 2				
J10	Matsuri Taiko				
J11	Matsuri Taiko Rim				
J12	Taiko 1			x	
J13	Taiko 2			x	
J14	Taiko Rim			x	
J15	Matsuri			x	
J16	Yyoo Dude				
< Korea >					
J17	Buk				
J18	Buk Rim				
J19	Jang-Gu				
J20	Jing Mute		Exc 28		
J21	Jing Soft		Exc 28		
J22	Jing Hard		Exc 28		
J23	Gengari Mute		Exc 29		
J24	Gengari Soft		Exc 29		
J25	Gengari Hard		Exc 29		
< China >					
J26	Ban Gu 1				
J27	Ban Gu 2				
J28	Ban Gu 3				
J29	Gu Roll		Exc 20		
J30	Gu High		Exc 20		

No.	Instrument	Loop	Exc No.	Hold	SPD-11
J31	Tang Gu Mute		Exc 21		
J32	Tang Gu		Exc 21		
J33	Hu Yin Luo Mute		Exc 22		
J34	Hu Yin Luo		Exc 22		
J35	Nao Bo				
J36	Xiao Bo				
J37	Small Tam-Tam				
J38	Large Tam-Tam				
J39	Large Gong			x	
J40	Small Gong			x	
J41	Tiny Gong				
J42	Bend Gong				
< Southeast Asia >					
J43	Finger Cymbal				
J44	Rama Cymbal				
J45	Chenchen Closed		Exc 23		
J46	Chenchen Open		Exc 23		
J47	Bali Cymbal Closed		Exc 24		
J48	Bali Cymbal Open		Exc 24		
J49	Thai Gong				
J50	Jaws Harp Open		Exc 25		
J51	Jaws Harp Wow		Exc 25		

Orchestral Percussion

No.	Instrument	Loop	Exc No.	Hold	SPD-11
o01	Sleigh Bell				x
o02	Tree Chimes				
o03	Triangle Mute		Exc 26		x
o04	Triangle Open		Exc 26		x
o05	Castanets				x
o06	Castanets with Hall Ambience				x
o07	Wood Block				x
o08	Slapstick				
o09	Concert Bass Drum Mute		Exc 27		x
o10	Concert Bass Drum Open		Exc 27		x
o11	Timpani 1 Soft				
o12	Timpani 1 Hard				
o13	Timpani 2				x
o14	Timpani Bend				x
o15	Church Bell				x

No.	Instrument	Loop	Exc No.	Hold	SPD-11
o16	Percussion Hit 1				
o17	Percussion Hit 2				
o18	Percussion Hit 3				
o19	Orchestra Hit Major 1				
o20	Orchestra Hit Major 2				
o21	Orchestra Hit Diminish 1				
o22	Orchestra Hit Diminish 2				
o23	Orchestra Hit 1				x
o24	Orchestra Hit 2				x

Melodic Percussion/Melodic Instruments

No.	Instrument	Loop	Exc No.	Hold	SPD-11
M01	Glockenspiel				x
M02	Vibraphone			x	x
M03	Xylophone				x
M04	Marimba 1				x
M05	Marimba 2				x
M06	Bass Marimba				
M07	Celesta				
M08	Tubular Bells 1			x	
M09	Tubular Bells 2			x	
< Central America >					
M10	Steel Drum 1				x
M11	Steel Drum 2				x

< India >

M12	Sitar				
M13	Sitar Gliss				
M14	Santoor Upper				
M15	Santoor Lower				
M16	Tambura				
M17	Tambura Drone			x	

< Middle East >

M18	Hammer Dulcimer Upper				
M19	Hammer Dulcimer Lower				

< Africa >

M20	Kalimba				x
M21	Log Drum				x
M22	Balaphone				
M23	Afro Zither				

No.	Instrument	Loop	Exc No.	Hold	SPD-11
< China >					
M24	Yang Qin				
< Southeast Asia >					
M25	Bonang				
M26	Gender				
M27	Saron				
M28	Angklung				
< Melodic Instruments >					
M29	Gamelan 1			x	
M30	Gamelan 2			x	
M31	Glass			x	
M32	Iron Hammer			x	
M33	Bamboo			x	
M34	Drip			x	
M35	Synth Strings 1			x	
M36	Synth Strings 2			x	
M37	Brass Hit 1 Short				
M38	Brass Hit 1 Long				
M39	Brass Hit 2 Short				
M40	Brass Hit 2 Long				
M41	Brass Hit 3 Short			x	
M42	Brass Hit 3 Long			x	
M43	Brass Fall				
M44	Choir Soprano			x	
M45	Choir Alto			x	
M46	Choir Bass			x	
M47	Choir Unison 1			x	
M48	Choir Unison 2			x	
M49	Choir 5th 1			x	
M50	Choir 5th 2			x	
M51	Choir 4th 1			x	
M52	Choir 4th 2			x	
M53	Acoustic Bass				
M54	Fingered Bass				
M55	Picked Bass				
M56	Slap Bass				
M57	Funky Bass				
M58	TB-303 Bass				
M59	SH-101 Bass				

Analog Percussion (CR-78, TR-808, etc.)

No.	Instrument	Loop	Exc No.	Hold	SPD-11
A01	DR-55 Claves				x
A02	CR-78 Cowbell				x
A03	CR-78 Metallic Beat				x
A04	CR-78 Guiro				x
A05	CR-78 Tambourine				x
A06	CR-78 Maracas				x
A07	CR-78 Bongo				
A08	CR-78 Claves				
A09	TR-707 Cowbell				
A10	TR-727 Agogo				
A11	TR-808 Conga				x
A12	TR-808 Claves				x
A13	TR-808 Maracas				x
A14	TR-808 Cowbell				x
A15	TR-808 Hand Clap				x
A16	TR-909 Hand Clap				

SOUND EFFECTS

Dance Sounds

No.	Instrument	Loop	Exc No.	Hold	SPD-11
d01	Hand Clap 1				x
d02	Hand Clap 2				x
d03	Little Clap				
d04	Hip Clap				
d05	Afro Clap				
d06	Scratch Push				x
d07	Scratch Pull				x
d08	Scratch Stereo				x
d09	DR-550 Scratch Push				
d10	DR-550 Scratch Pull				
d11	Scratch Bass Drum Push				
d12	Scratch Bass Drum Pull				
d13	Scratch Snare				
d14	Jungle Hat				
d15	Jungle Cymbal				
d16	Dance Shaker				
d17	Tape Rewind				
d18	Vinyl Stop				
d19	High-Q 1				x

No.	Instrument	Loop	Exc No.	Hold	SPD-11
d20	High-Q 2				x
d21	Beam High-Q				
d22	Air Blip				
d23	Techno Snap				
d24	Organ Chord				
d25	Distortion Guitar				
d26	Auh Voice				
d27	Techno Chord				
d28	Techno Scene				
d29	Synth Hit				
d30	Distortion Hit				
d31	Thin Beef				
d32	Techno Hit				
d33	Tao Hit				
d34	Philly Hit				
d35	Analog Bird				
d36	Retro UFO				
d37	Metal Sweep				
d38	Bounce				
d39	Distortion Swish				
d40	PCM Press				
d41	Jungle Roll Kick				
d42	Jungle Roll Snare				
d43	Techno Loop	x	Exc 30	x	

Artificial Sound Effects

No.	Instrument	Loop	Exc No.	Hold	SPD-11
E01	Burt				
E02	Boing 1				
E03	Boing 2				
E04	Onkey				
E05	Tom Noise				
E06	Lazer				
E07	Feedback Wave				
E08	Atmosphere				
E09	Bend Synth				
E10	Toy Gun				
E11	Eddy				
E12	R-8 Spark				
E13	Rattle				x

No.	Instrument	Loop	Exc No.	Hold	SPD-11
E14	Anvil				x
E15	Chop				x
E16	Metal 1				x
E17	Metal 2				x
E18	Metal Cross Stick				x
E19	Crash 1				x
E20	Crash 2				x
E21	Explosion				
E22	Shot 1				x
E23	Shot 2				x
E24	Shot 3				x
E25	Shot x				4
E26	Stick Hit				x
E27	Noise Accent 1				x
E28	Noise Accent 2				x
E29	Noise Accent 3				x
E30	Noise Accent 4				x
E31	Random Noise 1				x
E32	Random Noise 2				x
E33	Random Noise 3				x
E34	Random Noise 4				x
E35	Slide				
E36	Uut?				x
E37	Drop				x
E38	Emergency				x
E39	Woody 1				x
E40	Woody 2				x
E41	Monster Drum				x
E42	Can Drum				x
E43	Wah Guitar Down 1				
E44	Wah Guitar Up 1				
E45	Wah Guitar Down 2				
E46	Wah Guitar Up 2				

Natural Sounds, Human Voice

No.	Instrument	Loop	Exc No.	Hold	SPD-11
n01	Telephone 1				
n02	Telephone 2				
n03	Doorbell				
n04	Dog Bark				

No.	Instrument	Loop	Exc No.	Hold	SPD-11
n05	Bird				
n06	Car Door				
n07	Car Stop				
n08	Horn				
n09	Punch				
n10	Glass Crash				
n11	Door Close				
n12	Metallic Lid				
n13	Machine Gun				
n14	Pistol				
n15	Siren				
n16	Drum Major Whistle				
n17	Afro Feet				
n18	Afro Stomp				
n19	Thunder				
n20	Stream				
n21	Snaps			x	
22	Human Whistle				
n23	Oww!				
n24	Woa!				
n25	Ooh!				
n26	Chiki!				
n27	Hey!				
n28	Ou!				
n29	Ou! Up				
n30	Scream				
n31	Voice Loop	x	Exc 30	x	

Ambience, Reversed Sounds

No.	Instrument	Loop	Exc No.	Hold	SPD-11
r01	Kick Ambience				x
r02	Snare Ambience				x
r03	Tom Ambience				x
r04	Concert Ambience				x
r05	Reverse Bend Gong				
r06	Reverse Analog Bird				
r07	Reverse Laser				
r08	Reverse Boing				
r09	Reverse Bend Synth				
r10	Reverse High-Q				x
r11	Reverse Beat				x
r12	Reverse Sitar Gliss				
r13	Reverse Yyoo Dude				
r14	Reverse Ambience				x
r15	Reverse Clap				x
r16	Reverse Cymbal				x
r17	Reverse Kick				x
r18	Reverse Shot				x
r19	Reverse Snare				x
r20	Reverse Tom				x

Forces Phrase Loop Instrument to stop (MUTE)

No.	Instrument	Loop	Exc No.	Hold	SPD-11
Mut	Phrase Loop Mute		Exc 30		

No sound

No.	Instrument	Loop	Exc No.	Hold	SPD-11
off	Off				

Loop: After Phrase Loop plays for several measures, the volume then decreases.

Exc No.: You cannot sound the instrument that has the same number (#).

Hold: You can use the foot switch to hold notes.

SPD-11: Indicates one of the SPD-11's internal instruments.