



LP COLLAPSABLE CRADLE ASSEMBLY INSTRUCTIONS

LP636


STEP 1

Place the shelf portion of the Collapsible Cradle® on the floor so that the legs are facing up. Unfold each of the Upper Leg Tubes only 2/3 of their maximum range. Swing each of the “V” braces over the end of the upper leg “V” brace stabilizers then extend each Upper Leg Tube. Secure the Upper Leg Tube by screwing a Leg Brace Wing Screw into each of the “V” brace stabilizers. Make sure each screw binds snugly against its respective “V” brace.



STEP 2

Slide the Lower Legs (with the wheel casters attached) into Upper Leg Tubes. Secure the Lower Legs at the desired length by tightening the Leg Height Wing Screws snugly. Lock the wheels to prevent unwanted movement of the Cradle during assembly, adjustment, & playing.

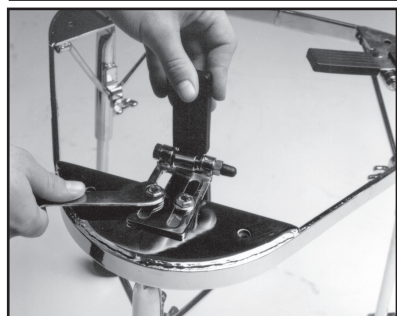

Note: Now turn the collapsible cradle over so that it is supported by the legs.

STEP 3

Using the cradle hex head bolts and washers, attach the Conga Support Brackets to the shelf portion of the Collapsible Cradle® (located just above each of the legs). Make sure that each of the three Support Brackets are in the same sliding position. Tighten the hex head bolts securely. The Conga Support Brackets slide to fine tune the height and angle of the conga. Important!: Make sure the rubber shell grippers cover both ends of each Conga Support Bracket for complete protection of the conga shell.



COMPONENTS:

Nuts/Bolts/Screws:
3 Leg Brace Wing Screws
3 Leg Height Wing Screws
8 Cradle Hex Head Bolts/Washers

PARTS:

3 Conga Support Brackets
6 Rubber Shell Grippers
2 Connecting Brackets
3 Small Rubber Bumpers
3 Large Rubber Bumpers

STEP 4

Two or more Collapsible Cradles® can be attached using the supplied Connecting Brackets and two remaining sets of Cradle Hex Head Bolts and Washers. Attach one end of a bracket to any of the six holes adjacent to the Conga Support Brackets, and the other end to one of the six holes on another Collapsible Cradle®. Use both Connecting Brackets to connect two Collapsible Cradles®. The multiple connecting holes allow players to set up a complete set of congas in the preferred position.

Note: The wheel casters attached to the bottom portion of the legs may be removed and the Small Rubber Bumpers attached to the vacated ends of the legs. Also, the lower legs themselves may be removed and the Large Rubber Bumpers attached where the lower legs slide into the upper legs

