APC-10 All Purpose Clamp

Owner's Manual

English

* Before using this unit, carefully read "USING THE UNIT SAFELY" and "IMPORTANT NOTES." After reading, keep the document(s) where it will be available for immediate reference.

Setting Up

Attach the all purpose clamp to the stand.

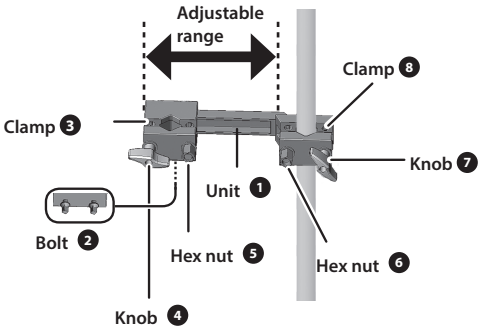

1. **Loosen knob ❼ and hex nut ❻, and use the clamp ❽ to securely fasten the unit to the stand.**
2. **Use a drum key to loosen bolt ❷, and then adjust clamp ❸ to the desired position and secure it.**

* A drum key is not included.

3. **Loosen knob ❹ and hex nut ❺, and securely insert the item that you're attaching.**
4. **Finally, make sure that none of the bolts, nuts, and hex nuts are loose.**

Caution when setting up

- The clamps ❸ ❽ can be attached to pipes with a diameter of 15.9–28.6 mm (5/8–1-1/8 inches).
- Adjust the tightened depth of the hex nuts ❺ ❻ as appropriate for the diameter of the attached pipe.
- When tightening the knobs, ensure that the clamps ❸ ❽ remain parallel with the unit ❶.

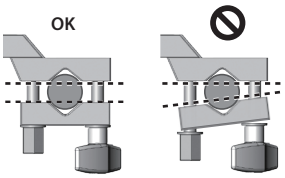

- To avoid an unstable situation, do not allow clamp ❸ to extend beyond the unit ❶.

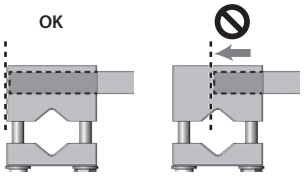

- After setup, check that the stand to which the all-purpose clamp is attached is stable before use.

Main Specifications

Roland APC-10: All purpose clamp

Usable pipe size	15.9–28.6 mm 5/8–1-1/8 inches
Weight	530 g / 1 lb 3 oz
Accessory	Owner's Manual

* This document explains the specifications of the product at the time that the document was issued. For the latest information, refer to the Roland website.

USING THE UNIT SAFELY

INSTRUCTIONS FOR THE PREVENTION OF FIRE, ELECTRIC SHOCK, OR INJURY TO PERSONS

About ⚠ WARNING and ⚠ CAUTION Notices

⚠ WARNING	Used for instructions intended to alert the user to the risk of death or severe injury should the unit be used improperly.
⚠ CAUTION	Used for instructions intended to alert the user to the risk of injury or material damage should the unit be used improperly. * Material damage refers to damage or other adverse effects caused with respect to the home and all its furnishings, as well to domestic animals or pets.

About the Symbols

⚠	The △ symbol alerts the user to important instructions or warnings. The specific meaning of the symbol is determined by the design contained within the triangle. In the case of the symbol at left, it is used for general cautions, warnings, or alerts to danger.
	The ⃠ symbol alerts the user to items that must never be carried out (are forbidden). The specific thing that must not be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the unit must never be disassembled.
	The ● symbol alerts the user to things that must be carried out. The specific thing that must be done is indicated by the design contained within the circle. In the case of the symbol at left, it means that the power-cord plug must be unplugged from the outlet.

ALWAYS OBSERVE THE FOLLOWING

⚠ WARNING

Do not disassemble or modify by yourself

Do not carry out anything unless you are instructed to do so in the owner's manual. Otherwise, you risk causing malfunction.

Do not repair or replace parts by yourself

Be sure to contact your dealer, a Roland service center, or an official Roland dealer.

For a list of Roland service centers and official Roland dealers, refer to the Roland website.

Do not use or store in the following types of locations

- Subject to temperature extremes (e.g., direct sunlight in an enclosed vehicle, near a heating duct, on top of heat-generating equipment); or are
- Damp (e.g., baths, washrooms, on wet floors); or are
- Exposed to steam or smoke; or are
- Subject to salt exposure; or are
- Exposed to rain; or are
- Dusty or sandy; or are
- Subject to high levels of vibration and shakiness; or are
- Placed in a poorly ventilated location.

Be cautious to protect children from injury

Always make sure that an adult is on hand to provide supervision and guidance when using the unit in places where children are present, or when a child will be using the unit.

Do not drop or subject to strong impact

Otherwise, you risk causing damage or malfunction.

⚠ CAUTION

Check safety before using this unit

Even if you observe the cautions given in the owner's manual, certain types of handling may allow this product to fall from the stand, or cause the stand to overturn. Please be mindful of any safety issues before using this product.

Take care so as not to get fingers pinched

When handling the following moving parts, take care so as not to get fingers, toes, etc., pinched. Whenever a child uses the unit, an adult should be on hand to provide supervision and guidance.

- Clamps
- Knobs
- Hex nuts

Keep small items out of the reach of children

To prevent accidental ingestion of the parts listed below, always keep them out of the reach of small children.

- Removable Parts
  Bolts, washers, nuts, knobs

IMPORTANT NOTES

Maintenance

- Never use benzine, thinners, alcohol or solvents of any kind, to avoid the possibility of discoloration and/or deformation.

Intellectual Property Right

- Roland is either a registered trademark or a trademark of Roland Corporation in the United States and/or other countries.
- Company names and product names appearing in this document are registered trademarks or trademarks of their respective owners.

© 2020 Roland Corporation